
## Five Steps To VFE Engine Startup

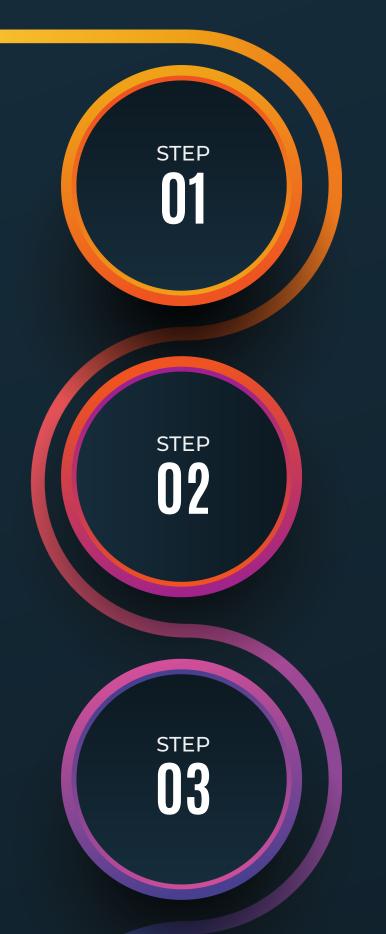

## Fill the Tank

Fill the tank with potable water. A sink or hose works just fine! The water should be clean and drinkable. Add a capful of white vinegar to keep the lines clean



There are two 120v plugs used to power the engine. One is for the air compressor and draws 13 amps. The other is for the water pump and fan and draws less than 5 amps



Connect the air and water hoses. Gray is for air, blue is for water. Adapters are used to split air and water to multiple fixtures. Connect the complete hose path.





Use the bleeder hose to prime the system. Place the bare hose end into a water tank. Connect the bleeder to the Water and Air line. Continue until water runs steadily through the bleeder hose



Connect your VaporFlame fixtures!

Find out more at: WWW.VAPORFLAME.NET